

FIG.1

DGD9HD66.041499

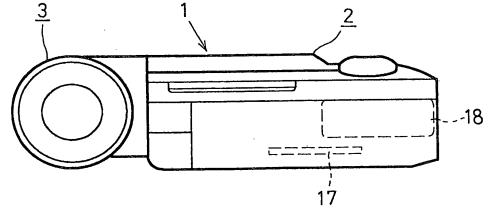



FIG.3



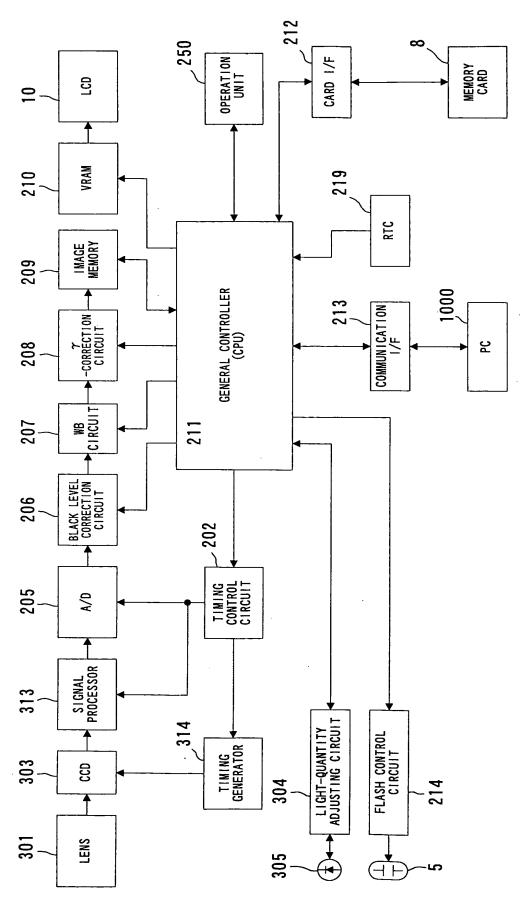
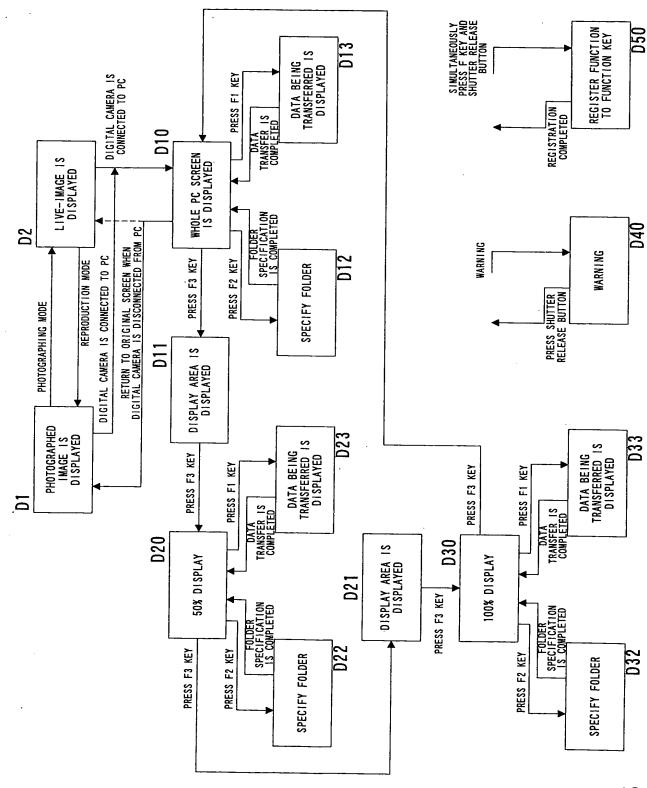


FIG.4

ngestoss.chipa

FIG.5

COPULACE "CHIHOD





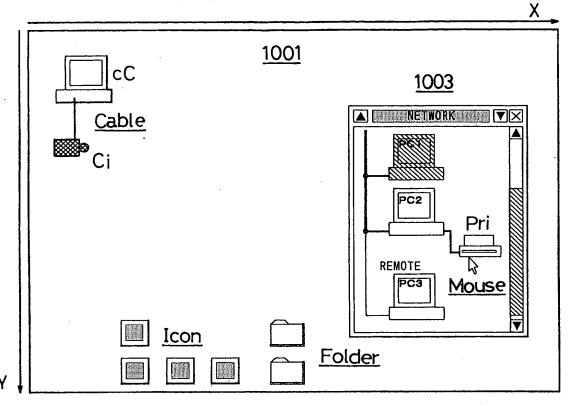


FIG.7(a)

# SCREEN OF THE DIGITAL CAMERA (D10)


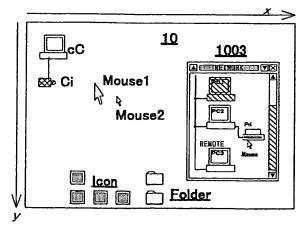


FIG.7(b)



### SCREEN OF PC (D12)

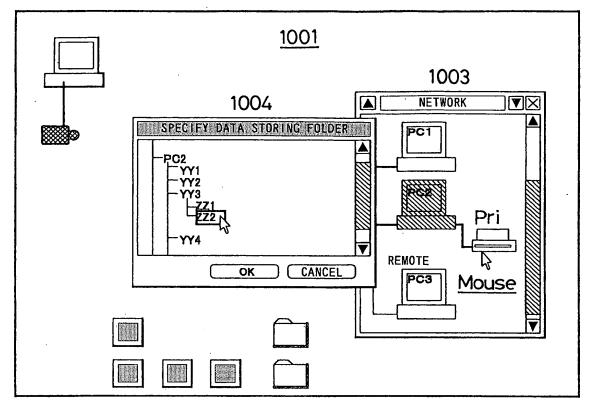


FIG.8(a)

#### SCREEN OF DIGITAL CAMERA (D12)


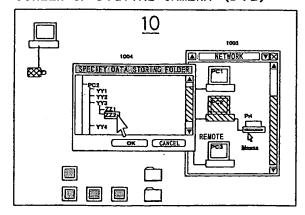


FIG.8(b)



#### SCREEN OF PC (D13)

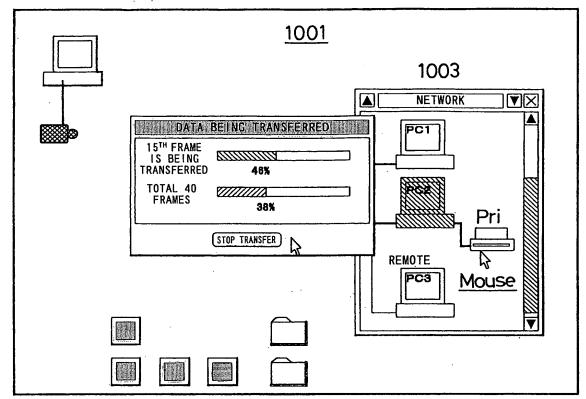


FIG.9(a)

### SCREEN OF DIGITAL CAMERA (D13)

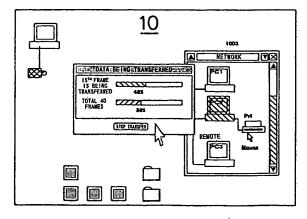


FIG.9(b)

CLASS SUBCLASS

DISPLAY AREA CHANGE IN ACCORDANCE WITH DISPLAY MAGNIFICATION RATES CHANGE AT DIGITAL CAMERA (D11)

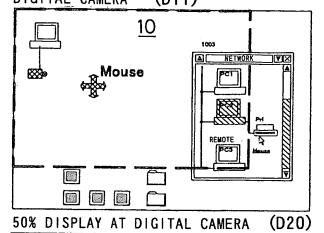


FIG.10(a)

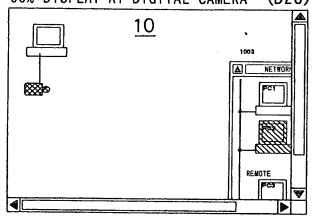


FIG.10(b)

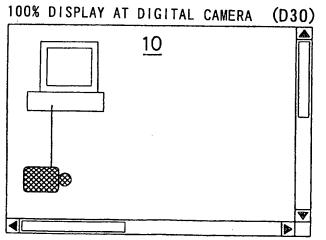


FIG.10(c)

### WARNING SCREEN AT PC (D40)

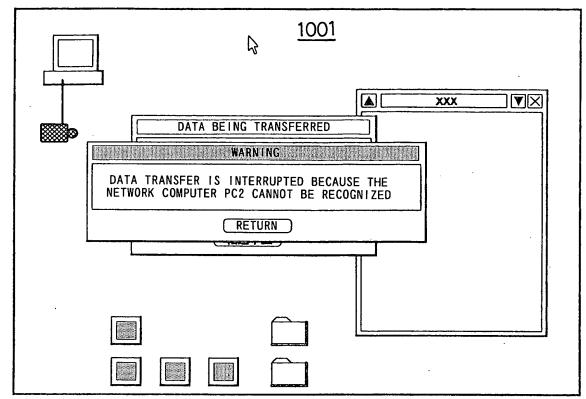


FIG.11(a)

# WARNING SCREEN AT DIGITAL CAMERA (D40)


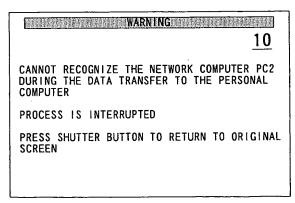


FIG.11(b)



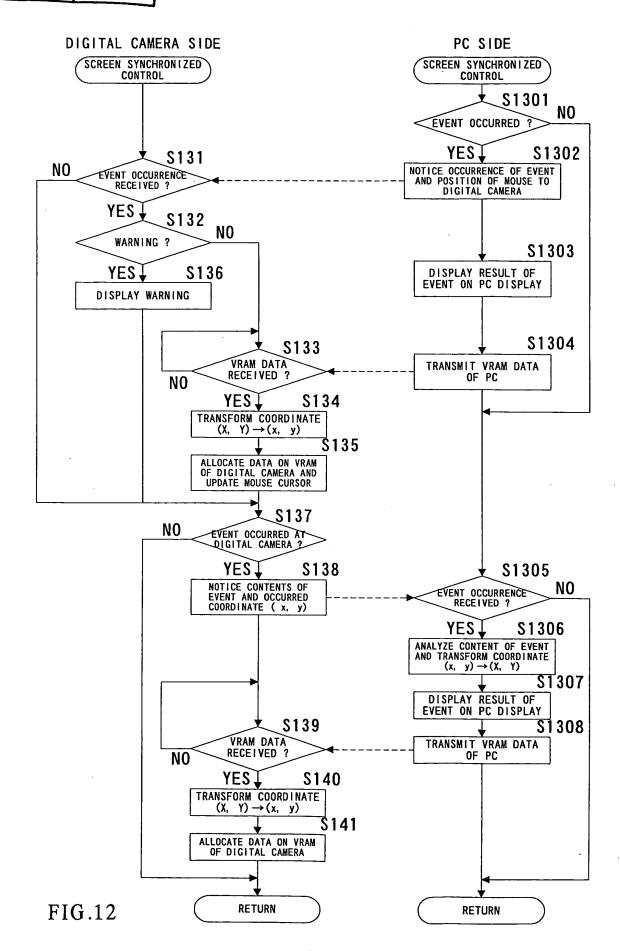

APPROVED O.G. FIG.

CLASS SUBCLASS





REGISTRATION OF ACTION TO FUNCTION KEY (D50)

# REGISTRATION CHANGE OF F1 KEY

TRANSFER DATA

10

SPECIFY FOLDER TO WHICH DATA ARE TRANSFERRED

CHANGE SCREEN DISPLAY MAGNIFICATION

TURN OFF POWER SOURCE OF PC

DISPLAY IMAGE DATA IN PC

EXECUTE APPLICATION IN PC

TRANSFER IMAGE TO PC IMMEDIATELY AFTER PHOTOGRAPHING

PRESS UP KEY/DOWN KEY TO SELECT CONTENT OF REGISTRATION AND PRESS SHUTTER BUTTON TO EFFECT

FIG.13

OGESIOSS . CHILGG

COLLECT SOCION







DISPLAY SCREEN OF THE DIGITAL CAMERA FOR PRINTING OUT THE PHOTOGRAPHED IMAGE DATA

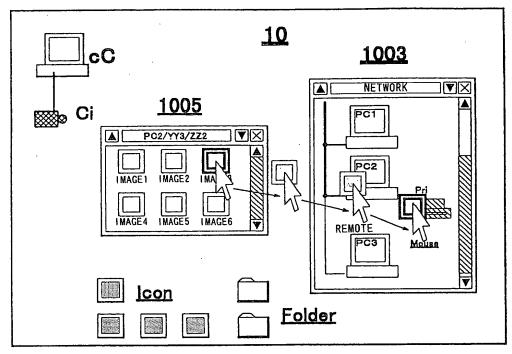


FIG.14





DISPLAY SCREEN OF THE DIGITAL CAMERA FOR EXECUTING THE APPLICATION SOFTWARE OF THE PERSONAL COMPUTER ON THE DIGITAL CAMERA

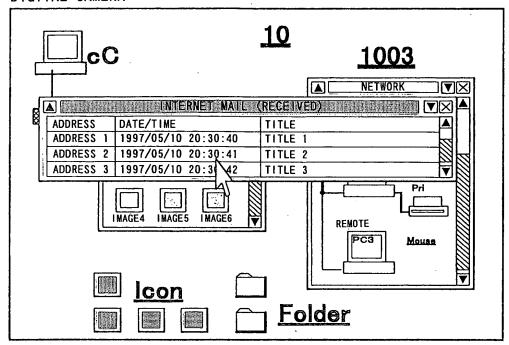


FIG.15.

OGESIONS OHIH